

The Erase CD dialog box allows you to erase the contents of the CD-RW currently in the selected CD-Recorder.