

DRG

VOLUME

PROGRAM SELECT

EDIT SELECT

1/CUTOFF

2/REO

GIATOR

ON/OFF

PROGRAM SELECT

D & B BREAKS

ELECTRONICA

TECHNO HOUSE

TRANCE

HIPHOP/VINTAGE

RETRO

S.F./HIT

VOCODER

AUDIO IN

1

2

3

A SIDE B

WRITE SHIFT

WRITE

SHIFT

EDIT SELECT 1

MIXER

OSC 2

OSC 1

PITCH

VOICE

VOICE

FORMANT HOLD

TIMBRE SELECT

1

2

3

4

FILTER

FILTER EQ

AMP

AMP EQ

LFO 1

LFO 2

ORIGINAL VALUE

ORIGINAL VALUE

1

2

SHIFT

UP

SHIFT

UP

PROGRAM NUMBER

1

2

3

4

5

6

7

8

EDIT SELECT 2

MOD FX

MOD FX

CH PAN B

PATCH 4

CH PAN A

PATCH 3

CH LV B

PATCH 2

CH LV A

PATCH 1

DELAY

DELAY

EQ

EQ

ARPEG. A

ARPEG. A

ARPEG. B

ARPEG. B

GLOBAL

MIDI

1 SYNTH		VOCODER	
VOICE	TRANSPOSE	VOICE	TRANSPOSE
PITCH	WAVE	PITCH	WAVE
OSC 1	WAVE	OSC 1	WAVE
OSC 2	WAVE	OSC 2	WAVE
MIXER	OSC 1 LEVEL	MIXER	OSC 1 LEVEL
FILTER	TYPE	FILTER	TYPE
FILTER EQ	ATTACK	FILTER EQ	ATTACK
AMP	LEVEL	AMP	LEVEL
AMP EG	ATTACK	AMP EG	ATTACK
LFO 1	WAVE	LFO 1	WAVE
LFO 2	WAVE	LFO 2	WAVE

2 SYNTH		VOCODER	
PATCH 1	CH LV A	SOURCE	CH 1 LEVEL
PATCH 2	CH LV B	SOURCE	CH 5 LEVEL
PATCH 3	CH PAN A	SOURCE	CH 1 PAN
PATCH 4	CH PAN B	SOURCE	CH 5 PAN
MOD FX	MOD FX	TYPE	TYPE
DELAY	DELAY	TYPE	TYPE
EQ	EQ	LOW EQ FREQ.	LOW EQ FREQ.
ARPEG. A	ARPEG. A	TEMPO	TEMPO
ARPEG. B	ARPEG. B	LATCH	LATCH
GLOBAL		MASTER TUNE	
MIDI		MIDI CH	

MOD

MOD

Keyboard