


NEED TO HAVE FLAT CEILING

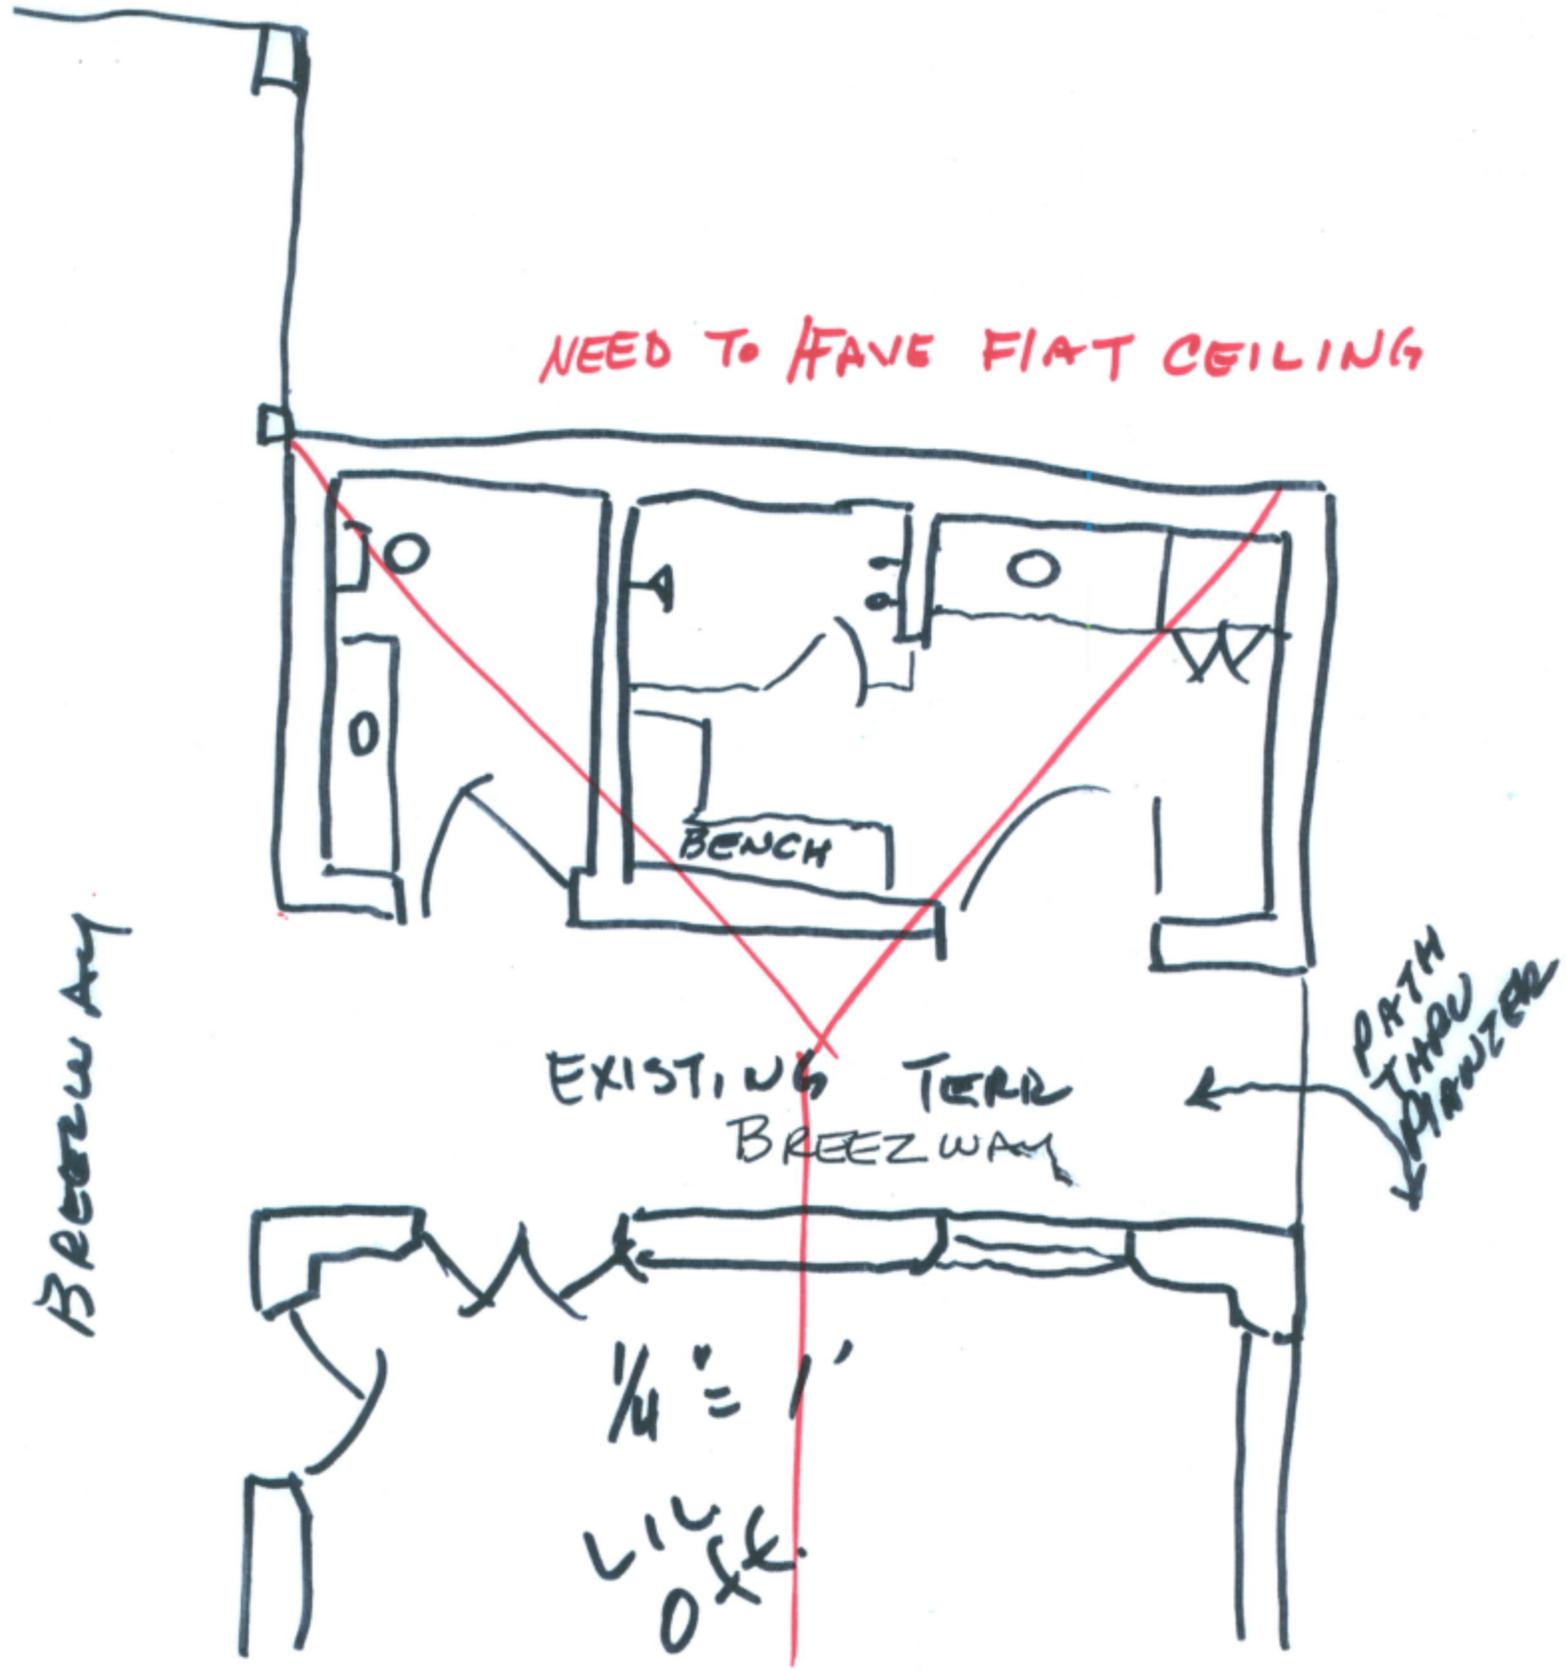

BREEZWAY

EXISTING TERR
BREEZWAY

PATH
THROUGH
DOORWAY

1/4" = 1'

1/4" OFF.